


After first Multiwall sheet and brackets have been secured...

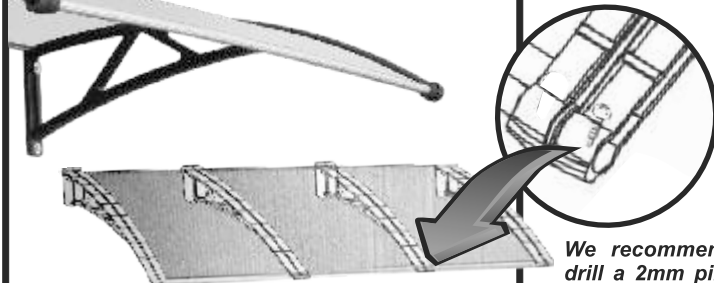

Step 2.2

We recommend that you drill a 2mm pilot hole into the top of awning bracket, when connecting 2 or more awnings together to secure Multiwall sheet. Use self-tapper screw provided for extra support.

DUROplastic

Head Office - Cape Town
 Libra Close , Brackenfell
 Tel 021 981 1440
 Fax 021 981 1541

Voucher REDEEM EXTRA BRACKET
 AT YOUR NEAREST DUROSTORE **0860 766 346**


INVOICE #

STORE
 PURCHASED FROM

DATE
 OF PURCHASE

For more product information, go to our website: www.duolite.co.za

T&C Apply. Bracket not to be used, damaged or older than 3 months from date of purchase

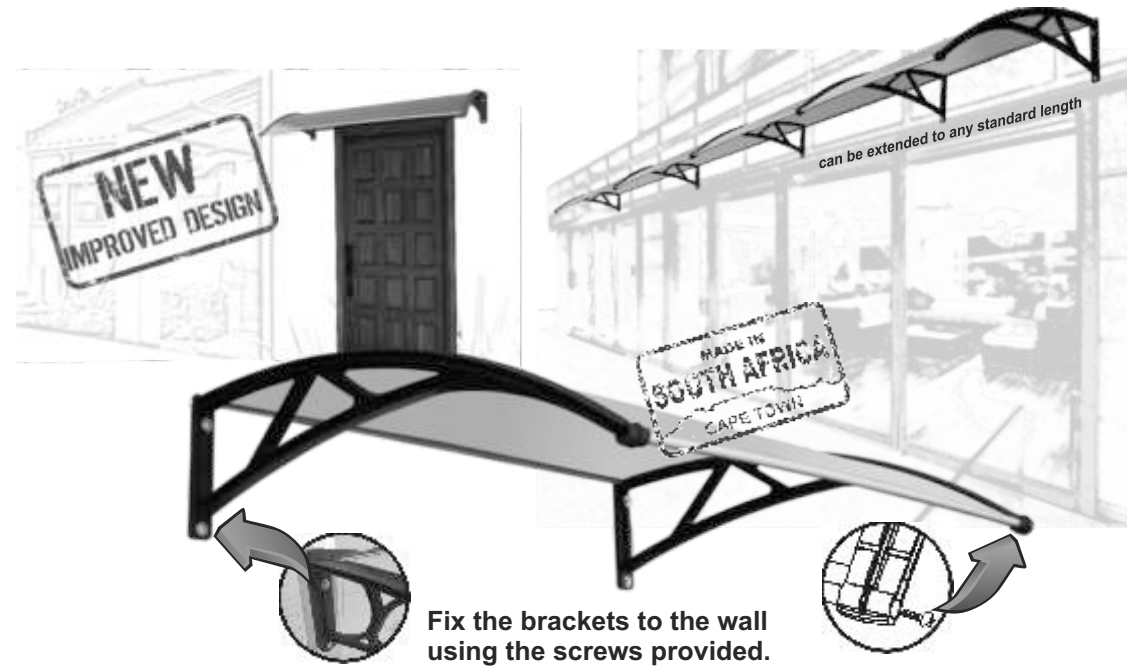

Fix the brackets to the wall using the screws provided.


Instruction Manual

DAP9 - DIY Awning

Tools required



Contents

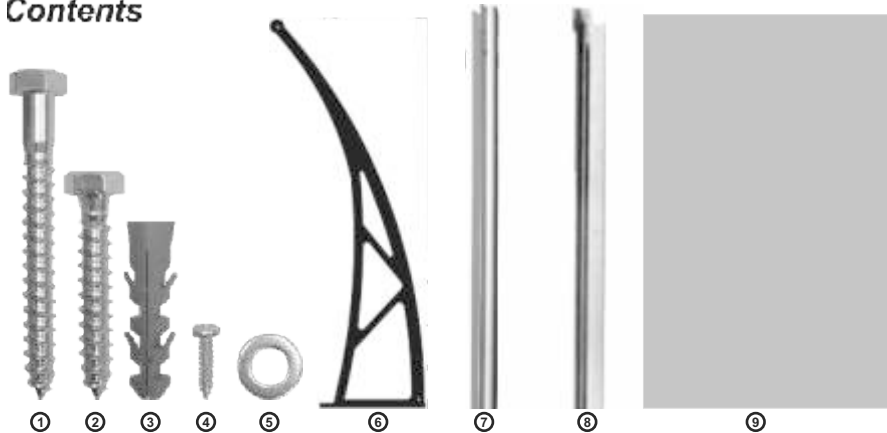

- ① Coach Screw (8x75mm) x2
- ② Coach Screw (8x50mm) x2
- ③ Fisher plug (10mm) x4
- ④ Fixing pozi screws (16mm) to front and back of awning x4

- ⑤ Washer x4
- ⑥ Bracket x2
- ⑦ Front C-channel x1
- ⑧ Back U-channel x1
- ⑨ Duolite sheet x1

Steps for installation

Slide C- and U-channel onto Duolite sheet.

⑧ Back U-channel

⑦ Front C-channel

Step 1

**** On the Multiwall sheet there is a neon sticker on the protective cover to indicate which side must face to the sun.**
NB: Only remove protective cover after installation.

Do not remove Aluminium Foil Tape - it is there to reduce moisture inside flutes.
 In the event of moisture ingress, remove foil and blow clear with hair dryer. Close again with Duct Tape / Foil Tape.

Slide Duolite Multiwall sheet into brackets and secure.

Step 2.1

Screw #8 into pre-drilled holes in the front and back of bracket

When connecting 2 or more awnings together, follow instructions on the next page.

Using a spirit level, mark and secure awning to the wall

Step 3

Note: #1 Coach screws for top holes

Note: #2 Coach screws for bottom holes

